





Pivot Kits

DC7110 / DC7120

Installation Instructions




Instructions

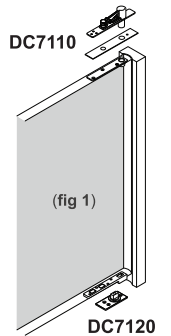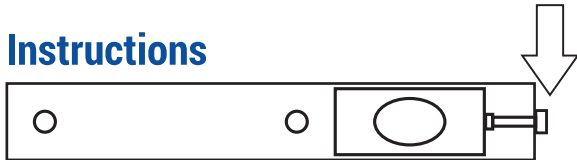


- Set bottom pivot position on base of door (see fig. 1). Ensure Pivot is offset 4mm back to the edge of the door (example 76mm in from door edge). Router pivot section into the base of the door - Approx. depth 20mm - after depth is reached, fasten pivot channel into the door using screws provided.

DOOR PREPARATION DETAIL FOR JMA HARDWARE - DC7110 - TOP PIVOT ASSEMBLY (Based on Jamb point or 80mm)

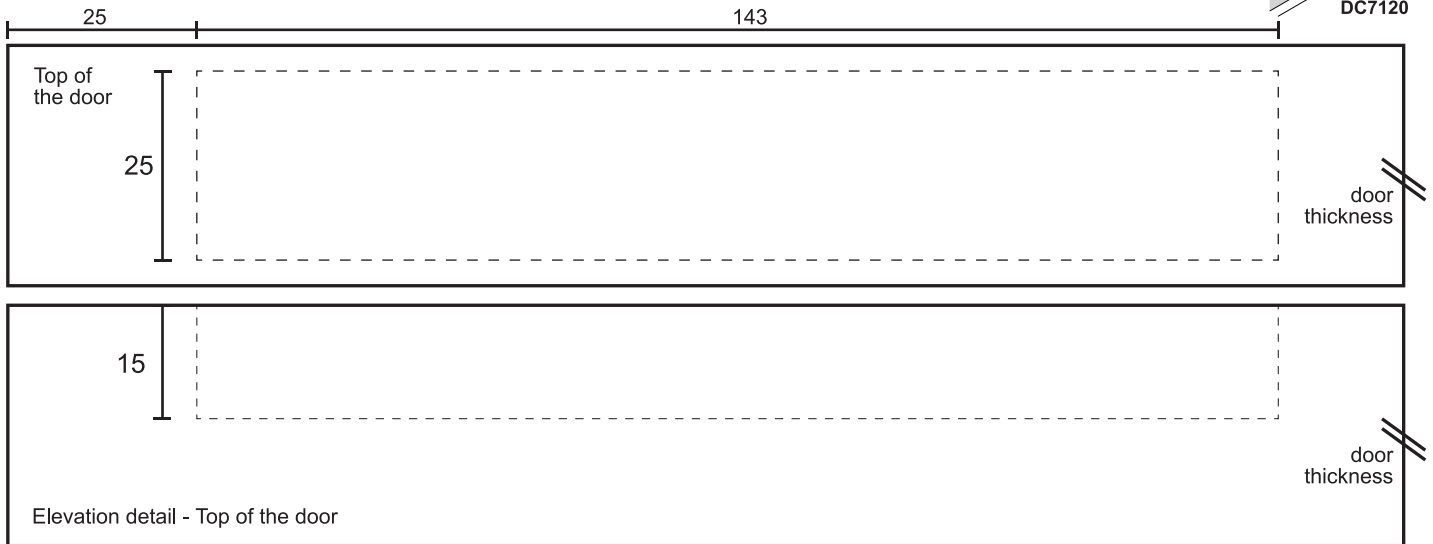

- In the head of the door, route out 143 x 25mm section at detailed location from door edge to a depth of 15mm

DOOR PREPARATION DETAIL FOR JMA HARDWARE - DC7120 - BOTTOM PIVOT ASSEMBLY (Based on Jamb point or 80mm)

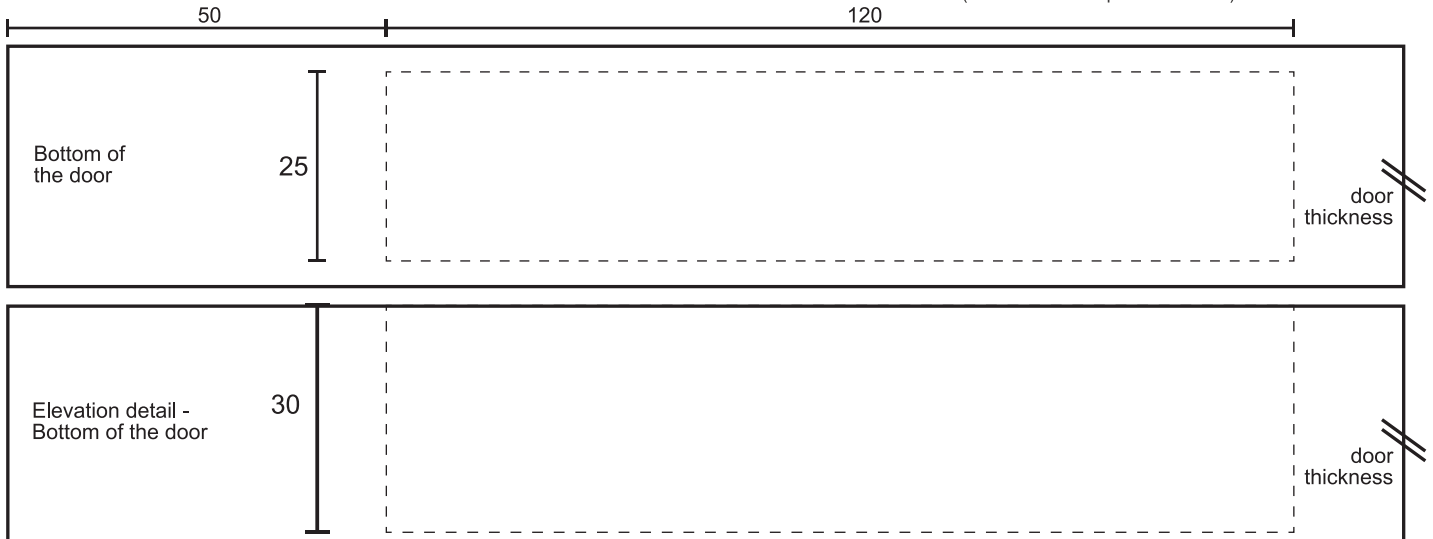

- In the bottom of the door, route out 120 x 25mm section at detailed location from door edge to a depth of 30mm. This will provide nominally a 10mm bottom door gap with surface mounted bottom plate. Recessed bottom plates adjust depth of prep.